

COZY CLUBHOUSE

1) Connect the poles of the lower part of the frame as shown in the diagram. Carefully place the frame into the tent and line up with the ground sheet.

2) Assemble the roof frame as shown, and place it inside the tent. Connect the roof to the lower section to complete the clubhouse.

Please note: The poles are designed to support the tent's nylon cover and should not be used for any other purpose otherwise breakage may occur.

A. Long Straight Tubes 14pcs.



B. Medium Straight Tubes 12 pcs.




C. Right Angle Connectors 6 pcs.



D. Wide Angle Connectors 4 pcs.



E. Mini Connectors 11pcs.

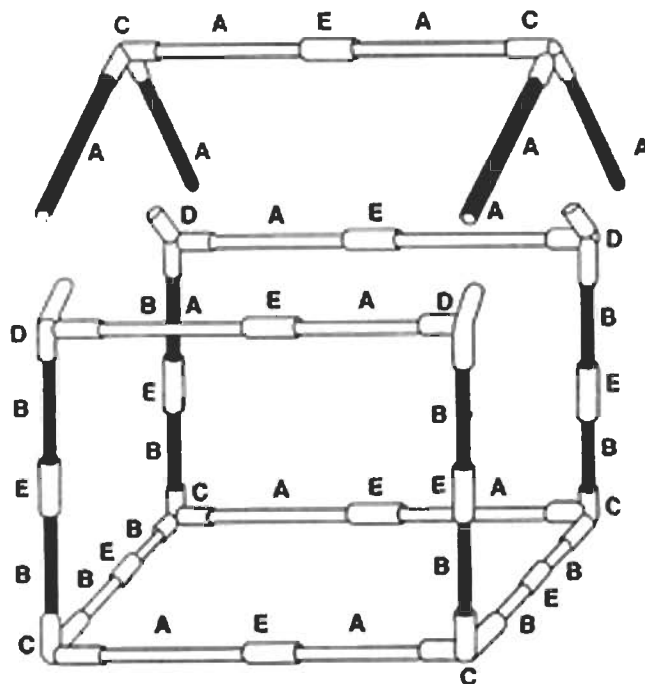

WARNING: KEEP ALL FLAME & HEAT SOURCES AWAY FROM TENT FABRIC

The tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.